

VX-6R Basic Operation Guide

power on/off - press and hold power
change squelch level - FW, Monitor, DIAL, Monitor

change transmit power - FW, *TXPO (repeat)

switch between VFO (manual tune) and Memory : V/M

VFO Mode:

change band - BAND (up) or FW, BAND (down)
change frequency within band - DIAL
Bands : .5-1.8 AM, 1.8-30 SW, 30-59 **6M**, 59-108 FM, 108-137 Air, 137-174 **2M**,
174-222 VHF, 222-420 **1.25M**, 420-470 **70CM**, 470-800 UHF, 803-999

Memory Mode:

switch between Memory (all) and Bank - BAND
change channel in all Memory mode - DIAL

change channel in Bank mode - DIAL
change Bank - FW, BAND, DIAL, BAND
scan current Bank - hold-BAND
continue scan - DIAL (up or down)
mark channel to skip from scan - FW, 5
stop scanning - BAND
scan multiple Banks - FW, BAND, DIAL, V/M, (repeat DIAL, V/M), BAND

Special Banks/Bands:

enter special Bank mode - FW, 9
exit special Bank mode - V/M
change Bank (Wx, Marine, SW) - BAND
change channel in Bank - DIAL

Programming:

Enter menu	FW - [0] Set
Select / enter	[0] Set
Change	Dial
Exit / Save	PTT

Add to memory Hold FW - Dial - FW
Del memory Hold FW - Dial - [X] TXPO

My VX-6R Memory and Banks:

chan 1-51	NorCal simplex 2m, 70cm, 1.25m, 6m
chan 101-214	North Bay+ repeaters 2m, 70cm
chan 301-321	North Bay+ repeaters 1.25m, 6m
chan 501-536	LE channels, Sonoma and Lake Co
chan 601-622	FRS/GMRS channels
chan 701-750	Fire

Bank 1	Simplex calls, all repeaters
Bank 2	Simplex calls, FRS/GMRS, some Marine
Bank 3	LE Sonoma County
Bank 4	LE Lake & Mendocino County
Bank 5	Fire