

## **VX-6R Basic Operation Guide**

power on/off - press and hold power  
change squelch level - FW, Monitor, DIAL, Monitor

change transmit power - FW, \*TXPO (repeat)

switch between VFO (manual tune) and Memory : V/M

VFO Mode:

change band - BAND (up) or FW, BAND (down)

change frequency within band - DIAL

Bands : .5-1.8 AM, 1.8-30 SW, 30-59 6M, 59-108 FM, 108-137 Air, 137-174 2M,  
174-222 VHF, 222-420 1.25M, 420-470 70CM, 470-800 UHF, 803-999

Memory Mode:

switch between Memory (all) and Bank - BAND

change channel in all Memory mode - DIAL

change channel in Bank mode - DIAL

change Bank - FW, BAND, DIAL, BAND

scan current Bank - hold-BAND

continue scan - DIAL (up or down)

mark channel to skip from scan - FW, 5

stop scanning - BAND

scan multiple Banks - FW, BAND, DIAL, V/M, (repeat DIAL, V/M), BAND

Special Banks/Bands:

enter special Bank mode - FW, 9

exit special Bank mode - V/M

change Bank (Wx, Marine, SW) - BAND

change channel in Bank - DIAL

My VX-6R Memory and Banks:

channels 1-51 all banks, NorCal simplex 6m, 2m, 1.25m, 70cm

channels 101-136 bank 1, repeaters, Sonoma

channels 200-210 bank 2, repeaters, Lake

channels 221-241 bank 3, repeaters, Mendocino

channels 251-272 bank 4, repeaters, Marin

channels 501-522 bank 9, law enforcement, Sonoma

channels 531-536 bank 10, law enforcement, Lake

channels 600-622 bank 8, FRS/GMRS